

Version: C

2023-11-28

Instruction Set

Si	upplier Approv	Customer approval	
R&D Designed	R&D Approved	QC Approved	
Robert	Peng Jun		



Version: C

2023-11-28

### **Revision Record**

REV NO.	REV DATE	CONTENTS	Note
Α	2021.04.07	NEW ISSUE	
В	2023.07.04	Correction: Data example in hex command for PWM and Backlight On/Off should not include the CRC code.	
С	2023.11.28	The maximum quantity of UI is 255	



Version: C

2023-11-28

### **Table of Contents**

List	Description	Page No.
	Cover	1
	Revision Record	2
	Table of Contents	3
1	Scope	4
2	General Information	4
3	User Interface	4
4	Libraries	5
5	Functions	6
6	Widgets	7
7	Programming	11



Version: C

2023-11-28

#### 1. Scope

This manual defines general instruction for the UI Editing Tool for UART TFT LCD module supplied by AMSON electronics.

#### 2. General Information

There are several widgets for designing the user interface. By clicking any widget, the corresponding icon will show on the window. User can set various attributes, e.g. the location, size, text in the right column.



#### 3. User Interface

User can create new User Interface, in which they can set pictures, buttons, gauges, and so on. Note that the maximum quantity of UI is 255.



<sup>\*</sup> A maximum of 32 objects is limited for each UI.



Version: C

2023-11-28

#### 4. Libraries

User can store up to 40 images. Note that the resolution of the image must be the same as that of the TFT LCD module while choosing Ext. Picture for the background of the UI.



User must Create Fonts before inputting text.



<sup>\*</sup> A maximum of 16 ascii characters is limited for the name length of each file.



Version: C

2023-11-28

#### 5. Functions


Item	Attributes					
File	New, open, save and exit.					
UART	Choose the corresponding port and Baud Rate. The Baud Rate is used for setting the communication baud rate between the UART TFT LCD module and the host.					
Update Firmware	Open a *.bin file and update the firmware.					
Setup	To be decided.					
Help	Link to the UI Editing Tool Manual.					
About	Describe the software version.					
Load	Upload the user interface(s.)					
Check	Choose the object and check its code; Simulation works as a simulator.					



Version: C

2023-11-28


6. Widgets

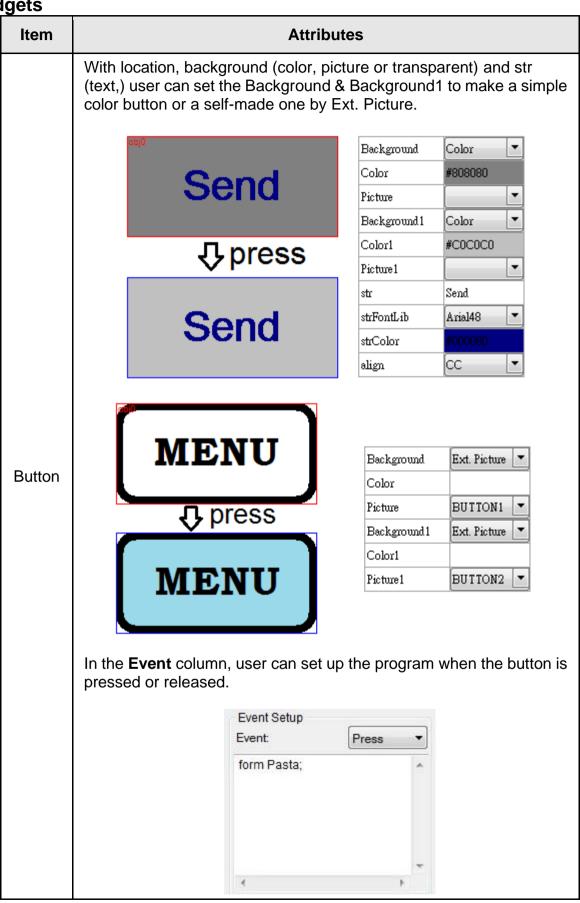



Version: C

2023-11-28

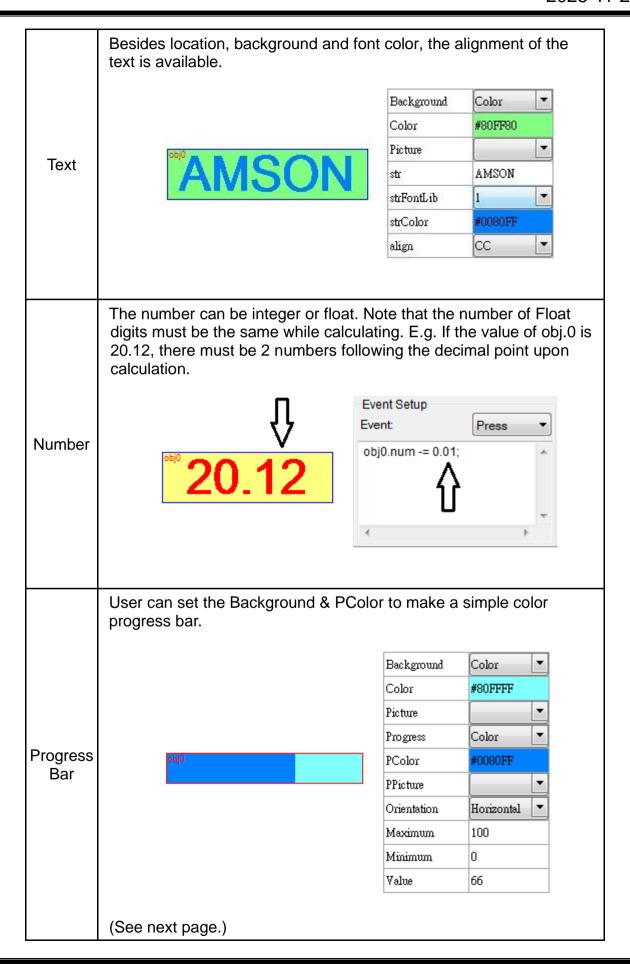




Version: C

2023-11-28

For a different design, user should prepare a full-resolution picture and locate the progress bar at the corresponding coordinates, choosing certain color for the Background and Pt. Picture for the Progress bar.



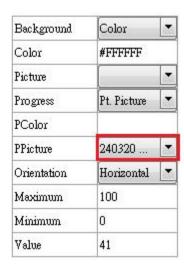

User can set the Background & SColor to make a simple color slide bar.

Slide Bar



60

Color


Background

Value



Version: C

2023-11-28

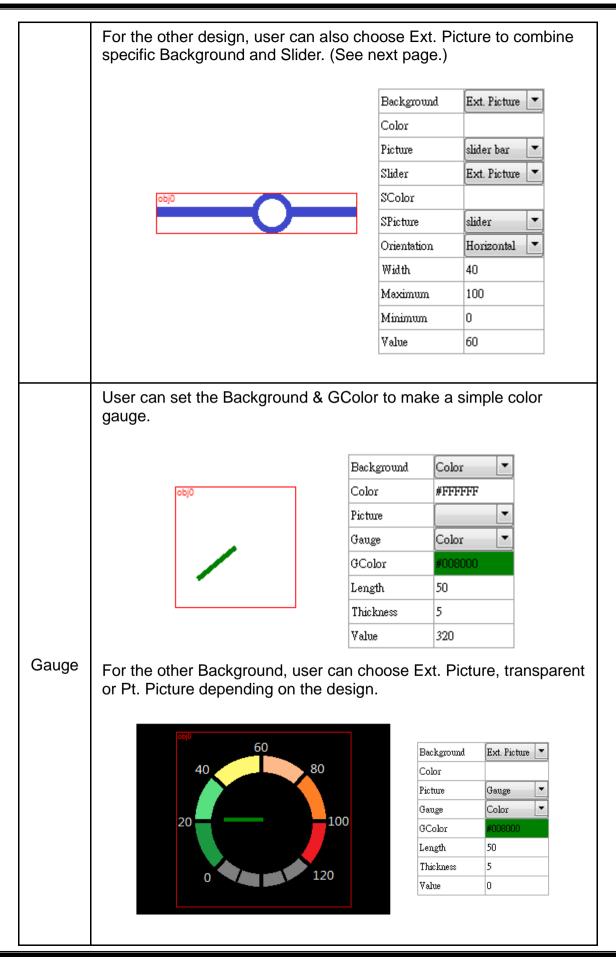




Version: C

2023-11-28

There's a box on the top right corner, in which user can pick the corresponding object to arrange the settings.

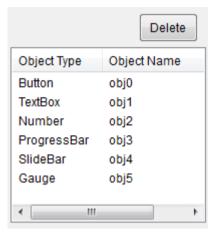

#### 7. Programming - All Case-Sensitive

#### **HEX Command**

HEX Co		1		T		
Function	Protocol Header (4Bytes)	Reserve (1Byte)	Command Type (1Byte)	Data Length (1Byte)	Data (n Bytes)	CRC (2Bytes)
Adjust Backlight PWM	FELP	0x00	11	2	0xA8+0x00(0%=off)~0x0A(100%) e.g. Change to 10%  0x46,0x45,0x4C,0x50,0x00,0x0B,0x02,0xA8,0x01  PWM adjustment range, total10 levels: 0x01=10%; 0x05=50%; 0x0A=100%	CRC 2Bytes
Adjust Backlight PWM Response	FELP	0x00	11	1	0x00=succeed; Otherwise failed.	CRC 2Bytes
LCD Display On/ off	FELP	0x00	12	1	0x00=LCD Display off. 0x46,0x45,0x4C,0x50,0x00,0x0C,0x01,0x00 0x01=LCD Display on. 0x46,0x45,0x4C,0x50,0x00,0x0C,0x01,0x01	CRC 2Bytes
LCD Display On/ off Response	FELP	0x00	12	1	0x00=succeed; 0x01=failed.	CRC 2Bytes
Shift UI	FELP	0x00	36	Length of following data	UI name length + UI name	CRC 2Bytes
Shift UI Response	FELP	0x00	36	1	0x00=succeed; Otherwise failed.	CRC 2Bytes
Change Attribute of Object str	FELP	0x00	37	Length of following data	UI name length +UI name + Object name length + Object name + str length + str	CRC 2Bytes
Change Attribute of Object str Response	FELP	0x00	37	1	0x00=succeed; Otherwise failed.	CRC 2Bytes



Version: C

2023-11-28

Example of hex command: Command Type = 37, change contains of str in object name "STULN1" in UI name "standby1" to "ABC". Then the host needs to send following data to LCD module through UART.

Header FELP (4 bytes)	Reserve 0x00 (1 byte)	Command 37 (1 byte)	Data length (1 byte)	UI name length (1 byte)*	UI name: standby1 (8 bytes)*	Object name length (1 byte)*	Object name: STULN1 (6 bytes)*	str length (1 byte)*	str: ABC (3 bytes)*	CRC (2 bytes)
0x46,0x45,0x4C,0x50	0x00	0x25	0x14	0x08	0x73,0x74, 0x61,0x6E, 0x64,0x62, 0x79,0x31	0x06	0x53,0x54, 0x55,0x4C, 0x4E,0x31	3	0x41,0x42, 0x43	0xB1,0x11

Remark: Data length is accumulated by those items with star \* marks. Hence, 1+8+1+6+1+3 = 20 (hex number: 0x14) is Data Length.

The CRC is calculted base on following code

\*\*\*\*\*\*\*\*\*\*

```
const unsigned short CRC_VALUE=10;
unsigned short crc16_compute(unsigned char const* p_data, unsigned int size, unsigned short const* p_crc)
{
    unsigned short crc = (p_crc == NULL) ? 0xFFFF : *p_crc;
    unsigned int i;
    for ( i = 0; i < size; i++)
    {
        crc = (unsigned char)(crc >> 8) | (crc << 8);
        crc ^= p_data[i];
        crc ^= (unsigned char)(crc & 0xFF) >> 4;
        crc ^= (crc << 8) << 4;
        crc ^= ((crc & 0xFF) << 4) << 1;
    }
    return crc;
}</pre>
```

Usage Example:

\*\*\*\*\*\*\*\*\*\*

unsigned short crc16\_result = crc16\_compute(COMM\_buff, count, &CRC\_VALUE);

//Where count is amount of bytes from Header to last data, for the "Example of Hex Command" shown above, it is from Header to str, the total data length is 27 bytes, hence count=27.

#### Char/ASCII Command

Oriain		iiiiaiia				
Function	Protocol Header (4Bytes)	Reserve (1Byte)	Command Type (1Byte)	Data Length (1Byte)	Data (n Bytes)	CRC (2Bytes)
Char/ASCII Command	FELP	0x00	127	Length of following data	Char/ASCII Command, ended with 0x00. Refer to the list below.	CRC 2Bytes
Char/ASCII Command Responds	FELP	0x00	127	1	0x00=succeed; Otherwise failed.	CRC 2Bytes

Char/ASCII Command List:

Chai/ASCII Command List.					
Function	Example	Description			
Switch UI	form main	Switch to an UI, the UI name is "main"			
Change str value of an object.	obj.str=test	Change the str value of an object name called "obj" to "test".			
Change color of str of an object	Obj.fcolor=#ff0000	Change the str color of an object name called "Obj" to color #ff0000.*			
Change background type of an	obj.btype=pic	pic: change background type of object name "obj" to picture, the size of an			



Version: C

2023-11-28

object.	obj.btype=ppic obj.btype=bcolor obj.btype=null	picture must have same dimension of object.  ppic: change background type of object name "obj" to portion of a picture.  bcolor: change background type of object name "obj" to color.  null: change background type of object name "obj" to transparent.
Change background picture of an object.	obj.pic=cat	Change backgound picture of object name "obj" to picture name cat where cat needs to be exist in the project, and backgound type of "obj" needs to be pic.
Change background color of an object.	Obj.bcolor=#ff0000	Change background color of object name "obj" to color #ff0000 (Red). The background type of "Obj" needs to be bcolor.
Change the display location of an object.	obj.x=160 obj.y=82 obj.w=20 obj.h=43	Change x coordinate of display loation of object name "obj" to 160. Change y coordinate of display location of object name "obj" to 82. Caution: x, y is base on upper left corner of an object. Change x, y location not properly may cause the object size is out of LCD display range. Change width of object name "obj" to 20 pixels. Change height of object name "obj" to 43 pixels.

Remark: Color #ff0000 is hex color code (Red) where is base on RGB color value.

#### Tips on changing background picture of an object with different size between object and picture.

While background of an object is set as picture, the selected picture size must have exactly same size as object. e.g. object size:20\*50 pixels, the picture size also need to be exactly 20\*50 pixels. If user want to change background picture size of an object and treat it as next object size, then user should change object background type to null first, then change object width/height to exactly as same as new picture size, set background picture to new picture name, then set background of object to picture. Following is the procedure,

Example shows below as using object name "NUM12", new picture name is TinyCar\_Red, and its size is 51\*51. Each step means send out that string to LCD Module through UART.

Step 1: NUM12.btype=null

Step 2: NUM12.w=51

Step 3: NUM12.h=51

Step 4: NUM12.pic=TinyCar\_Red

Step 5: NUM12.btype=pic

#### Keyword in Code

User can implement C-Language like code in LCD module to run user's designed process. Following list is keywords in the code.

Code needs to be ended with semicolumn, ";" for each line except condition statement (if else, while, and, for)				except condition statement (if else, while, and, for)	
Keyword	Variable Type	Assignable	Return Type	Description	
obj.str	string	V	char	Object named "obj" and its content is treated as string.	
TB2.str -= 1;	B2.str += "W"; Append string "W" to object TB2. If TB2.str contains "H", then TB2.str becomes "HW" after TB2.str += "W" Assign string "Hello World" to TB2.str.				
obj.num	integer/ float	V int32 or float Object named "obj" and its content istreated as integer (1, 2, -3) of float (-1.2, 2.54), note that the sign "+" shouldn't be used. However, user can set the sign "-" to make a negative number.			
Examples: NU2.num -= 1; NU3.num = TB		Description: Set number to object NU2 to subtract 1. If NU2 was set to 4, then it becomes 3 after this operation. Set number to object NU3 to TB3+2.00. If TB3 was set to 8.00, then NU3 becomes 10.00 after this operation. Float digit must has same digit count set in object after decimal point (digits after decimal of NU3, TB3 and numl must keep same). e.g. All have two digits after decimal. NU3 needs to be 0.00 (two digits after decimal) TB3 needs to be 0.00 (two digits after decimal) The number 2 needs to be 2.00 (two digits after decimal)			
obj.len	integer	NA	int32	Get the current string length (in byte) of the object named "obj".	
Example: if (TB2.len > 5)		Description: To judge in conditional routing. If obj.str = "ABCDEF", then obj.len will return number 6 in 4 bytes length. e.g. 0x06, 0x00, 0x00, 0x00 For numbers type of object, Number/ Progress Bar/ Slide Bar/ Gauge object, the return data for this operate will always be 4 bytes sent by LSB order, 0x04, 0x00, 0x00, 0x00 E.g. If the string length is 258 bytes, the return data will be 0x02 0x01 0x00 0x00. This demo what LSB means, the string length can not be over 31 characters for an object.			



Version: C

2023-11-28

				T		
obj.fcolor	string	V	string	Get/set the font color (as string) of the object named "obj".		
Example: TB2.fcolor =	"#FF00FF";	Description: Assign the TB2 string color to " "#FF00FF"				
obj.btype	string	V	string	Get/set the background type (as string) of the object named "obj".		
Example: TB2.btype =	"bcolor";	Description: Change TB2 background type to bcolor (use color as background). Options can be, "bcolor", use color as background "pic", use extended picture as background "null", use background as background (transparent) "ppic", use potion of picture as background				
obj.pic	string	V	string	Get/set the pic (as string) of the object named "obj".		
Example: TB2.str = OBJ	1.pic;			ckground of OBJ1 to TB2 string. e.g. if the name of background picture of OBJ1 is r will become "TinyCar" after this operation.		
obj.bcolor	string	V	string	Get/ set the background color (as string) of the object named "obj".		
Example: TB2.str = OBJ	1.bcolor;			f background of OBJ1 to TB2 string. e.g. if the RGB color value of background of 2.str will become "#FF00FF" after this operation.		
obj.x, obj.y	integer	V	int32	Get/ set the coordinates of the object named "obj".		
Example: TB2.x=160; TB	32.y=30;	Description: Assign the location of object TB2 to coordinate x=160 pixel, and y=30 pixel. The origin of an object is on the top-left corner of that object. Be careful on changing the location of object to average the object area is out of LCD display area.				
obj.w, obj.h	integer	V	int32	Get/ set the width/ height of the object named "obj".		
Example: TB2.w=160; TB2.h=25;  Description: Assign the width of object TB2 to 160 pixels, and h=25 pixels. The origin of an object is on the top-left corner of that object. Be careful on changing the object area is out of LCD display area. If object's background is extended picture, cleaves error when changed size is not matching to the size of existed extended picture.			e top-left corner of that object. Be careful on changing the size of object to avoid the lay area. If object's background is extended picture, change the size of object will			
send	command	NA	NA	Send data out through UART port.		
Example: (Send out as s send "Text"; send BT2.str; (Send out as n send 513; send -300; send BT2.num	umber)	Description: String types are str, fcolor, bcolor, and pic. Send out string "Text" through UART. Send out string content of BT2.str. If BT2.str contains "STOP", then string "STOP" will be sent out through UART. Number types are num,x,y,w,h,and len. Send out integer number 513 (int32, LSB format) through UART. The 513 will be sent as 0x01,0x02,0x00,0x00. Send out integer number -300 (int32, LSB format) through UART. The nagtive value will be sent as 1's complem value, e.g300 will be sent as 0xD4,0xFE,0xFF,0xFF Send out content of object BT2.num, it could be integer (int32, LSB format) or float value. The float value IEEE-754 Floating Point with hexdecimal representation. e.g. If float number is 2.58, then it will be sent 0xB8,0x1E,0x25,0x40 through UART.				
form	command	NA	NA	Change to UI page.		
Example: Form main;		Description: Change current displayed UI to the UI named "main".				
if else	command	Conditional statement.				
while	command	Conditional statement.				
for	command	Conditional statement.				

Take an example on changing background picture of an object with different size between object and picture which shown above by using Char/ASCII Command, and we implement the same function by writing the code for an action when button, for example, is pressed. If it's written in the program for button, following code can be put in code area of button in UI Edit Software

NUM12.btype= "null"; NUM12.w=51; NUM12.h=51; NUM12.pic="TinyCar"; NUM12.btype="pic";



Version: C 2023-11-28

If you have any questions about the manual, please feel free to contact us.